 


SINGER

25-010



cod. **8323**



 
cod. **8321**

per SINGER
KL: 28K

25-012



cod. **15280**
(= 125113) (= 125319)
(= 173585) (= 352262)




cod. **15279 (1°)**



cod. **125261 (2°)**

per SINGER
KL: 15K, 191K, 193, (1°)
194, 227, 228, 239 (1°)
15K88, 15M88 (2°)


25-014 ricamo

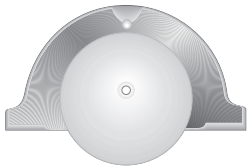


cod. **15359**

per SINGER
KL: 15M, 15M88

25-016 zig zag

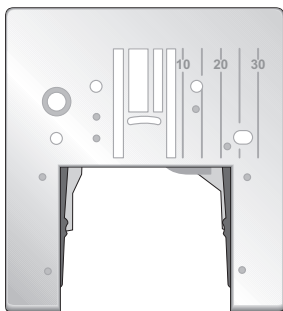

cod. **30129-300**

 

cod. **30164-300**

per SINGER
KL: 3000, 3400 Rumina

25-018



cod. **32602**



cod. **32600**

per SINGER
KL: 66K

25-020



cod. **44408**



cod. **44895**

per SINGER
KL: 259

SINGER

25-022 zig zag

per SINGER
KL: L100, L106,
324 Startlet

Placca
cod. **64627-324**


Griffa
cod. **67973-324**

25-024 ricamo

per SINGER
KL: L100, L106,
324 Startlet

Placca
cod. **64961-324**

25-026 taglia-cuci

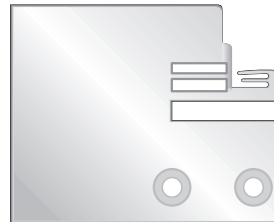


cod. **72899**

per SINGER
KL: 14J-334



 cod. **77015**



cod. **77016**

25-028



cod. **81711**



cod. **8324**
cod. **81710**

per SINGER
KL: 28K, 128K


25-030 ricamo



cod. **103486**

per SINGER
KL: 502, 507, 509, 513,
514, 518, 527, 533,
538

25-032

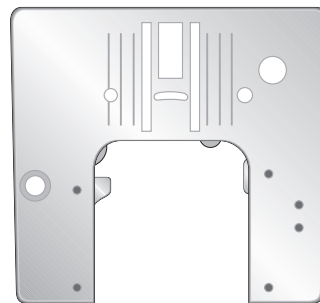

cod. **137306**

 
per SINGER
KL: 6408, 6412, 6416,
6423

Griffa
cod. **137255**

25-033



cod. **137621**



cod. **137624**

per SINGER
KL: