


PLACCHE E GRIFFE

SINGER

25-034

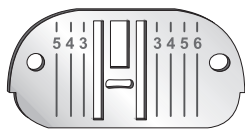

cod. **153152**



cod. **511050**

per SINGER
KL: 700, 702, 706, 708,
720, 722, 726, 728

25-036

per SINGER
KL: 15NL

Placca
cod. **154904-851**

25-038 *imp. dritta*

per SINGER
KL: 337, 338, 348

Placca
cod. **161614**



cod. **446017**
(= 103188) (= 103377)
(= 153286) (= 153797)
(= 155457) (= 172027)
(= 422406) (= 422407)

25-040 *zig zag*

per SINGER
KL: 5123, 5127

Placca
cod. **170313**

Griffa
cod. **170328**

25-042 *zig zag*

per SINGER
KL: 5102, 5107

Placca
cod. **170487**


Griffa
cod. **170496**

25-044 *ricamo*

per SINGER
KL: 6740, 6744, 6785,
6790

Placca
cod. **171138**

25-046 *ricamo*

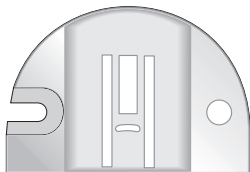


cod. **171285**
(= 352464)

per SINGER
KL: 416K, 418K


SINGER

25-048

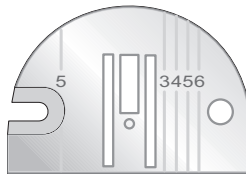


cod. **171391**
(= 44985) (= 102469)

 per SINGER
KL: 270C, (1°)
248 Facility, (2°)
262 Facility, (2°)
288 Facility, (2°)
588 Facility, (2°)
416K, 418K, (2°)
477K, 478K (2°)




cod. **445967 (1°)**
(= 445090)

 


cod. **446017 (2°)**
(= 103188) (= 103377)
(= 153286) (= 153797)
(= 155457) (= 172027)
(= 422406) (= 422407)

25-050

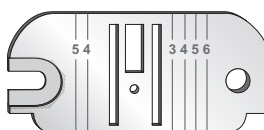


cod. **171392**

 per SINGER
KL: 502, 507, 514, 518,
527, 538




cod. **446017**
(= 103188) (= 103377)
(= 153286) (= 153797)
(= 155457) (= 172027)
(= 422406) (= 422407)

25-052

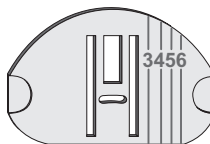


cod. **172200**
(= 503586)

 per SINGER
KL: 401M, 411



cod. **446017**
(= 103188) (= 103377)
(= 153286) (= 153797)
(= 155457) (= 172027)
(= 422406) (= 422407)

25-054

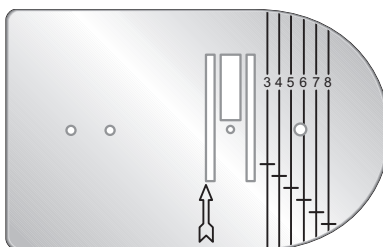


cod. **173090**
(= 173089)

per SINGER
KL: 306K25, 319K2

Griffa
cod. **105149**

25-056

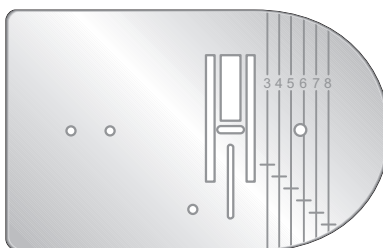

cod. **173092**
(= 105053) (= 105299) (= 173087)
(= 173088) (= 173091)

per SINGER
KL: 306K25, 319K2

Griffa
cod. **105149**