

SINGER

25-058




cod. **173303**
(= 173302)

per SINGER
KL: 320K2


Griffa
cod. **173268**

25-060

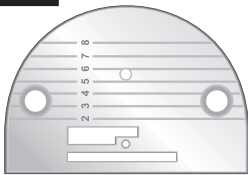

cod. **173585**
(= 15280) (= 125113)
(= 125319) (= 352262)

 per SINGER
KL: 15K, 191K, 193, (1°)
194, 227, 228, 239 (1°)
15K88, 15M88 (2°)



cod. **15279 (1°)**



cod. **125261 (2°)**

25-062

per SINGER
KL: 8528

Placca
cod. **176874**

Griffa
cod.

25-064 imp. dritta

per SINGER
KL: 404G

Placca
cod. **179015**

Griffa
cod. **179016**


25-066

per SINGER
KL:

Placca
cod. **206003**


Griffa
cod.

25-068

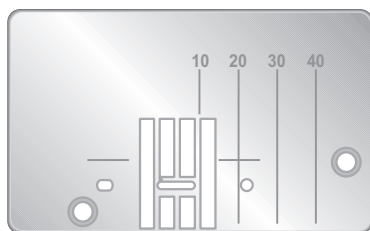

cod. **283007**

 per SINGER
KL: XL 10, XL 50



cod. **283137**

25-070



cod. **310706**
(= 312391)

per SINGER
KL: 351, 358, 495B, (1°)
502, 507, 509, (1°)
514, 518, 527, 538 (1°)
6100 serie, 6184 (1°)
7100 serie (1°)
513, 533 (2°)




cod. **446017 (1°)**
(= 103188) (= 103377)
(= 153286) (= 153797)
(= 155457) (= 172027)
(= 422406) (= 422407)

cod. **103378 (2°)**

SINGER

25-072

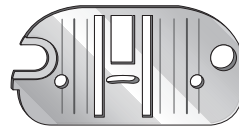

cod. **312777**




cod. **179891**
(= 312679) (= 447581)

per SINGER
KL: serie 2500
serie 4500, 4700
5800 Melody
5910, 7028
serie 6200, serie 9800
serie Samba, Serenade
Symphony, Concerto,
Harmony

altre griffe:
313021 - 313993

25-074

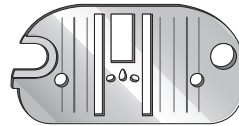

cod. **313066**



cod. **179891**
(= 312679) (= 447581)

per SINGER
KL: serie 2500
serie 4500, 4700
5800 Melody
5910, 7028
serie 6200, serie 9800
serie Samba, Serenade
Symphony, Concerto,
Harmony

altre griffe:
313021 - 313993


25-076 zig zag

per SINGER
KL: 342, 345


Placca
cod. **316108**

Griffa
cod. **316107**

25-078

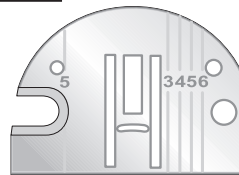

cod. **317398**

 

cod. **531667**

per SINGER
KL: 965, 968

25-080 taglia-cuci

per SINGER
KL: 14U-595

Placca
cod. **350350**

Griffe
cod. **350330**
cod. **350338**

25-082 taglia-cuci

per SINGER
KL: 14U-595

Placca p. arrotolato
cod. **350361**

Griffe
cod. **350330**
cod. **350338**

25-084 zig zag

per SINGER
KL: 237

Placca
cod. **352105**

Griffa
cod. **352072**