 


SINGER

25-120

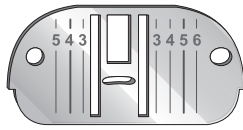

cod. 383698



 
Metallo
cod. 181843



Plastica
cod. 383334

per SINGER
KL: 2001A13

25-122

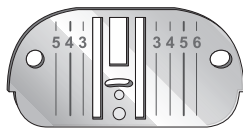

cod. 383720
(= 382806)



Metallo
cod. 506194/M

 


Plastica
cod. 506194

per SINGER
KL: 2000 G23 Futura

25-124 **zig zag**

Placca
cod. 383952




Metallo
cod. 181843



Plastica
cod. 383334

per SINGER
KL: 2010

 25-126 **zig zag**

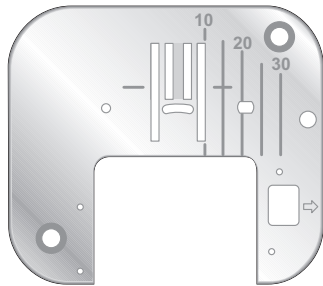


cod. 385105
cod. 385012 Placca cpl.

per SINGER
KL: 4000N Futura DSXII
Professional SX


Griffa
cod. 385187

 25-128

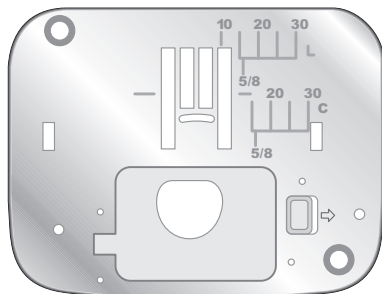


cod. 386056

 per SINGER
KL: XL 100




cod. 386175
(= 386174)

 25-130

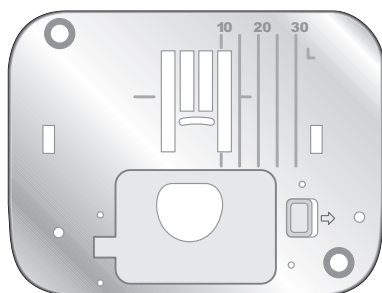

cod. 387043

 per SINGER
KL: XL 1000




cod. 386175
(= 386174)

SINGER

25-132



 cod. 403009



cod. 403129

per SINGER
KL: 1007, 1012, 1014

25-134 **zig zag**

cod. 409286



cod. 445802 (1°)

cod. 354073 (2°)

cod. 356029 (3°)

per SINGER
KL: 290 (1°)
1425 (2°)
8002, 8007 Merrit (3°)
8019 Merrit (3°)

25-136 **imp. dritta**


cod. 409287




cod. 445802

per SINGER
KL: 290

 25-138 **taglia-cuci**

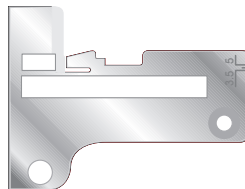


cod. 412688

 


cod. 412781

per SINGER
KL: 14U-134A, -174B,
14U-344B,
14U-184B, -354B

 25-138 **taglia-cuci**

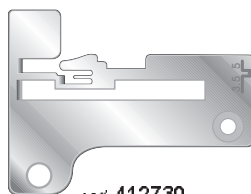


cod. 412730

 

cod. 412783 (1°)

 per SINGER
KL: 14U-134A, -174B, (1°)
14U-344B, (1°)
14U-184B, -354B (2°)



cod. 376521 (2°)



cod. 376522 (2°)

25-140 **taglia-cuci**



Per orlo frullato
cod. 412784



cod. 412781

per SINGER
KL: 14U-134A, -174B,
14U-344B,
14U-184B, -354B