



PLACCHE E GRIFFE

VIGORELLI

27-020

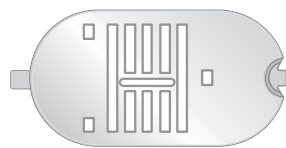

 cod. **3.12051.0**



cod. **3.12052.0**

per VIGORELLI
KL: Maxi 3
V60, V62, V63, V160,
V163, V260, V263
Fantasy

27-022



cod. **440/..11970**

27-024




cod. **85111-2-90**
(= 85111-2-20)
(= 552501-0-00)




cod. **85511-0-90**
(= 85511-0-03)
(= 551098-0-00)
(= 553511-0-00)

per VIGORELLI
KL: 106, 107

27-026

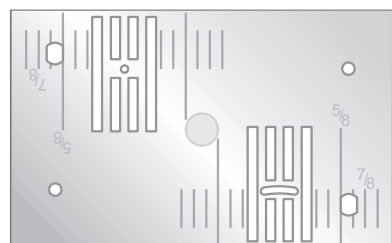


cod. **197111-4-10**
(= 197111-4-00)

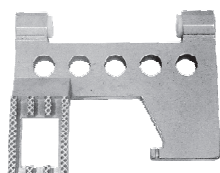


cod. **197622-3-10**

per VIGORELLI
KL: Maxima 1 5941
Maxima 2 5942
5943

27-028

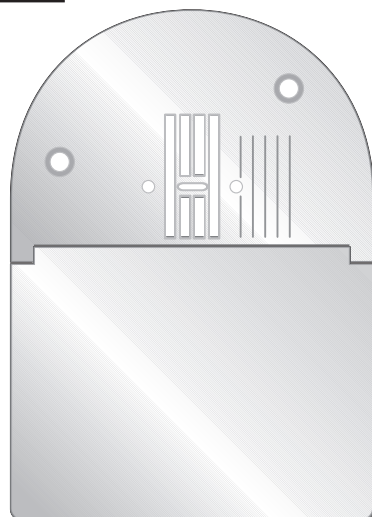

cod. **301529-0-02**

 


cod. **301174-0-08**


per VIGORELLI
KL: 410

VIGORELLI

27-030

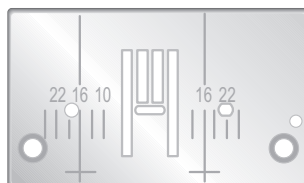

cod. **315035-0-00**

 

cod. **315025-0-00**

per VIGORELLI
KL: V105

27-032 *zig zag*


Placca
cod. **315518-0-00**



cod. **315635-0-00**

per VIGORELLI
KL: V420, V430

27-034

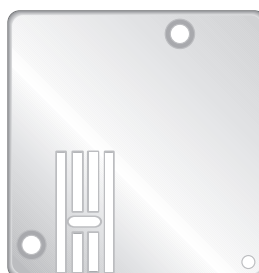

cod. **315741-0-00**

per VIGORELLI
KL: V425

27-036 *zig zag*


Placca
cod. **316028-0-00**

Griffa
cod. **316585-0-00** (1°)


per VIGORELLI
KL: V421 (1°)
V440, V441 (2°)

cod. **316239-0-00** (2°)

27-038

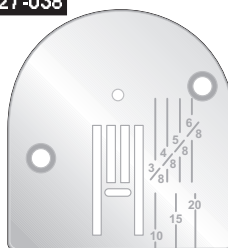

cod. **316539-0-00**

 

cod. **316390-0-00**

per VIGORELLI
KL: V426, V445

27-040



cod. **324233-0-00**



cod. **324229-0-00**
(= 324345-2-00)

per VIGORELLI
KL: V498

27-042



cod. **344009-0-00**



cod. **344010-0-00**



cod. **344029-0-00**

per VIGORELLI
KL: 439



cod. **344011-0-00**



cod. **344409-0-00**



cod. **344030-0-00**